

User Guide

N32L436MBL_EVB Development Board Hardware

Introduction

The purpose of this document is to allow users to quickly familiarize themselves with the N32L436MBL_EVB development board, understand the functions, usage instructions, precautions, and facilitate MCU debugging and development based on the development board.

CONTENTS

1	HARDWARE DEVELOPMENT INSTRUCTIONS.....	3
1.1	<i>Brief.....</i>	3
1.2	<i>Development Board Function.....</i>	3
1.3	<i>Development Board Layout</i>	4
1.4	<i>Development Board Jumper Usage Instructions</i>	7
1.5	<i>Development Board Schematic.....</i>	8
2	VERSION HISTORY	16
3	DISCLAIMER	17

1 Hardware Development Instructions

1.1 Brief


The N32L436MBL_EVB development board is used for sample development of 32-bit N32L43XM series chips of Nsing Technology. This document describes the functions, usage instructions and precautions of the N32L43MBL_EVB development board in detail.

1.2 Development Board Function

The part number of the main MCU chip in the development board is N32L436MBL7, and it is packaged with LQFP80 pins. The development board connects all functional interfaces to facilitate customer development.

1.3 Development Board Layout

Figure 1-1 Development Board Layout

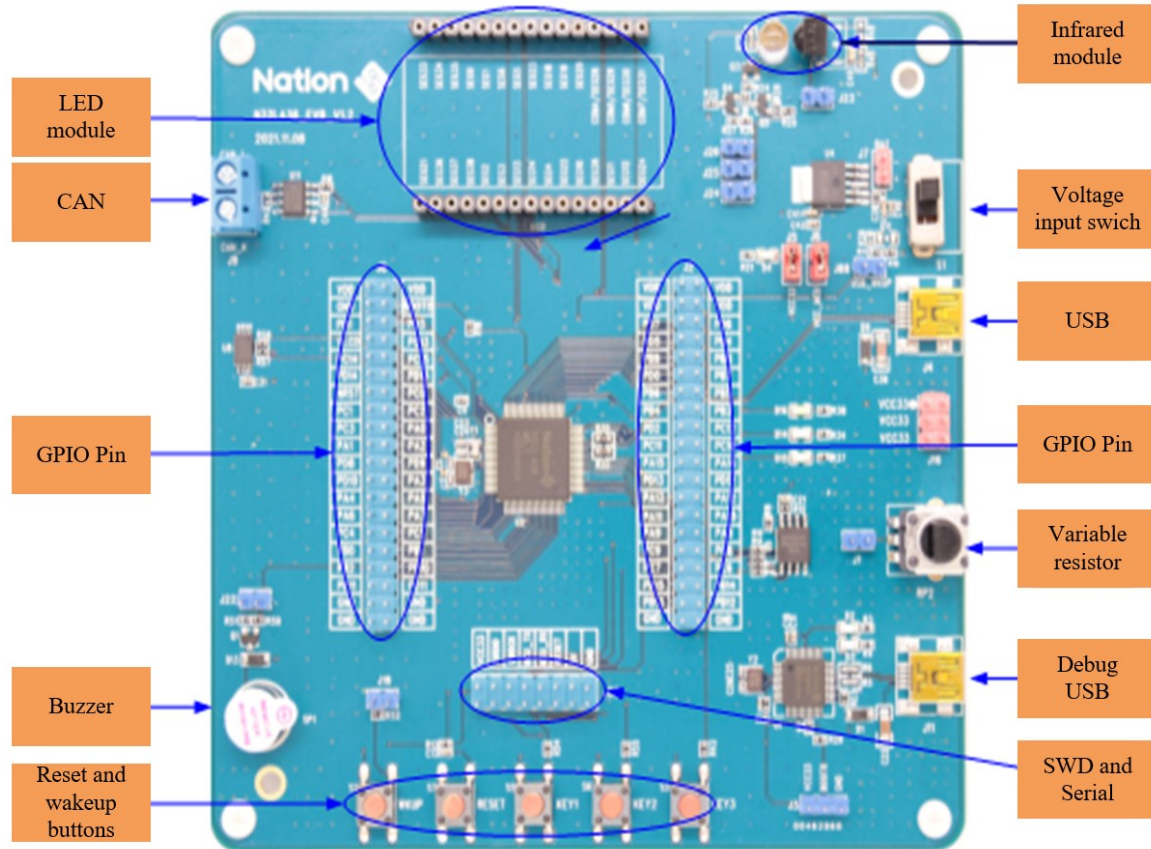

- **Power supply for the development board**

The development board can be powered by USB COMM interface (J4) and/or DEBUG USB (J11).

- **USB COMM interface (J4)**

The Mini USB interface (J4) is used to connect the DP and DM signals of the main MCU (U2) for the USB interface communication.

- **Debug USB (J11)**

Through the DEBUG_USB interface of NS-LINK chip (U4), it can provide main MCU program download and debugging functions, and can also connect to the MCU's serial port

to provide USB to serial conversion function.

- **SWD interface and Serial port (J33)**

SWD interface: SWDIO and SWDCK are used to download and debug the main MCU program. You can use ULINK2 or JLINK to download and debug the MCU, or you can short the SWDIO signal pin and the SWDCK signal pin with the jumper cap, and perform MCU downloading and debugging through DEBUG USB.

Serial port: MCU_TX and MCU_RX are used as serial port external signals. MCU's PA9 (TX) and PA10 (RX) are used as serial port, which can be connected to external serial port devices separately. Or by shorting the MCU_TX signal pin and the MCU_RX signal pin with jumper cap, customers can use the NS-LINK on the development board to convert the USB port to a serial port for convenience.

- **Reset and Wake Buttons (S7, S2)**

S7 and S2 are the reset button and wake-up button respectively, Connect the chip's NRST pin and PA0-WKUP pin respectively for chip reset and wake-up functions.

- **Universal keys (S3, S5, S6)**

S3, S5, and S6 are general buttons, which are connected to the pins PD13, PA5 and PD12 of the chip respectively.

- **BOOT (J8 PIN4)**

J8 PIN4 is BOOT0 pin, which can be shorted to power and ground through jumper caps as needed.

- **LCD module**

The LCD screen is connected to the MCU LCD controller. And the specific definition of LCD interface, please refer to "UM_N32L43x Series Datasheet".

- **Buzzer**

The buzzer SP1 is controlled through the MCU PB2 pin.

- **CAN interface**

CAN is converted to the CAN interface J9 through the CAN transceiver (TJA1050).

- **Infrared module**

The development board is equipped with an onboard infrared transmission circuit and an integrated infrared receiver. The infrared emitter is labeled as D12, and the integrated infrared receiver is labeled as U14.

- **Potentiometer**

Potentiometer RP2 is connected to MCU PC5 (ADC_IN15) pin.

- **GPIO (J2, J8)**

The GPIO interfaces of the chip are all lead out, and the 3.3V voltage and GND pins are also reserved on the pins, which is convenient for testing. For the specific definitions of the GPIOs, please refer to "UM_N32L43x Series Datasheet".

1.4 Development Board Jumper Usage Instructions

Figure 1-2 Development Board Jumper Description

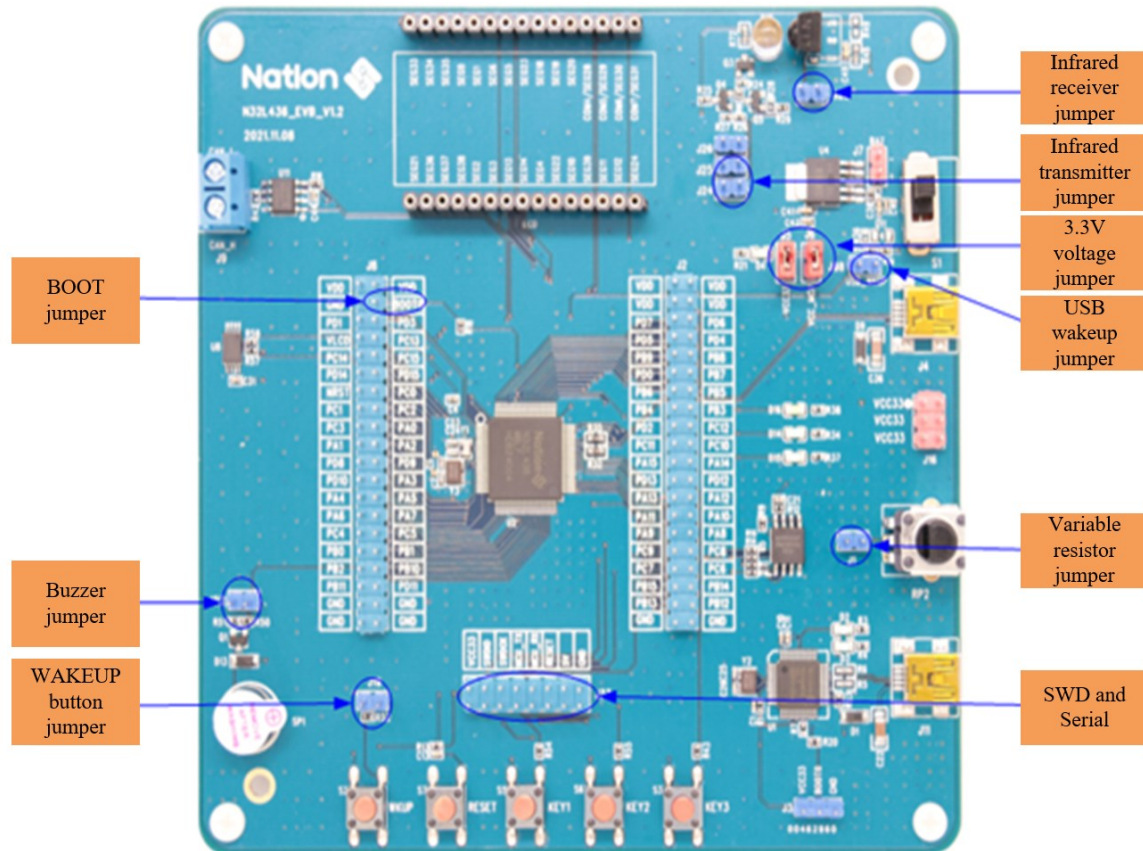


Table 1-1 Development Board Jumper Description List

No.	Jumper Bit Number	Jumper Function	Instructions For Use
1	J5, J6	3.3V power supply jumper	J5: Power supply 3.3V to NS-LINK MCU chip. J6: Power supply 3.3V to the main MCU chip.
2	J88	USB wakeup jumper	When the USB interface is inserted, shorting this jumper can wake up the MCU through PA0 (set the PA0 bit as the WKUP signal).
3	J33	SWD jumper	Using NS-LINK to download the program to the MCU through the USB DEBUG port, you need to short the SWDIO signal pin and the SWDCK signal pin.
	J5	Serial jumper	When using NS-LINK as a serial port through the USB DEBUG port, you need to short the MCU_TX signal pin and the MCU_RX signal pin.
4	J8 PIN4	BOOT jumper	J8 PIN4: BOOT0.
5	J23	Infrared receiver jumper	When using infrared receiver module, you need to short this jumper.
6	J24, J25	Infrared transmitter jumper	When using infrared transmitter module, you need to short this jumper.
7	J1	Potentiometer jumper	When adjusting the variable resistor, you need to short this jumper.
8	J19	WAKEUP button jumper	When using WAKEUP button to wake up the MCU, you need to short this jumper.
9	J22	Buzzer jumper	When using buzzer module, you need to short this jumper.


1.5 Development Board Schematic

The schematic diagram of the N32L436MBL_EVB development board is described as follows (For details, please refer to "N32L436MBL_EVB_V1.2").

- MCU connection**

Refer to Figure 1-3 for the schematic diagram of the MCU connection. Each VDD pin of the MCU is connected with a capacitor, and all GPIOs are connected to the J1 and J2 pins for easy debugging.


Figure 1-3 MCU Connection Diagram

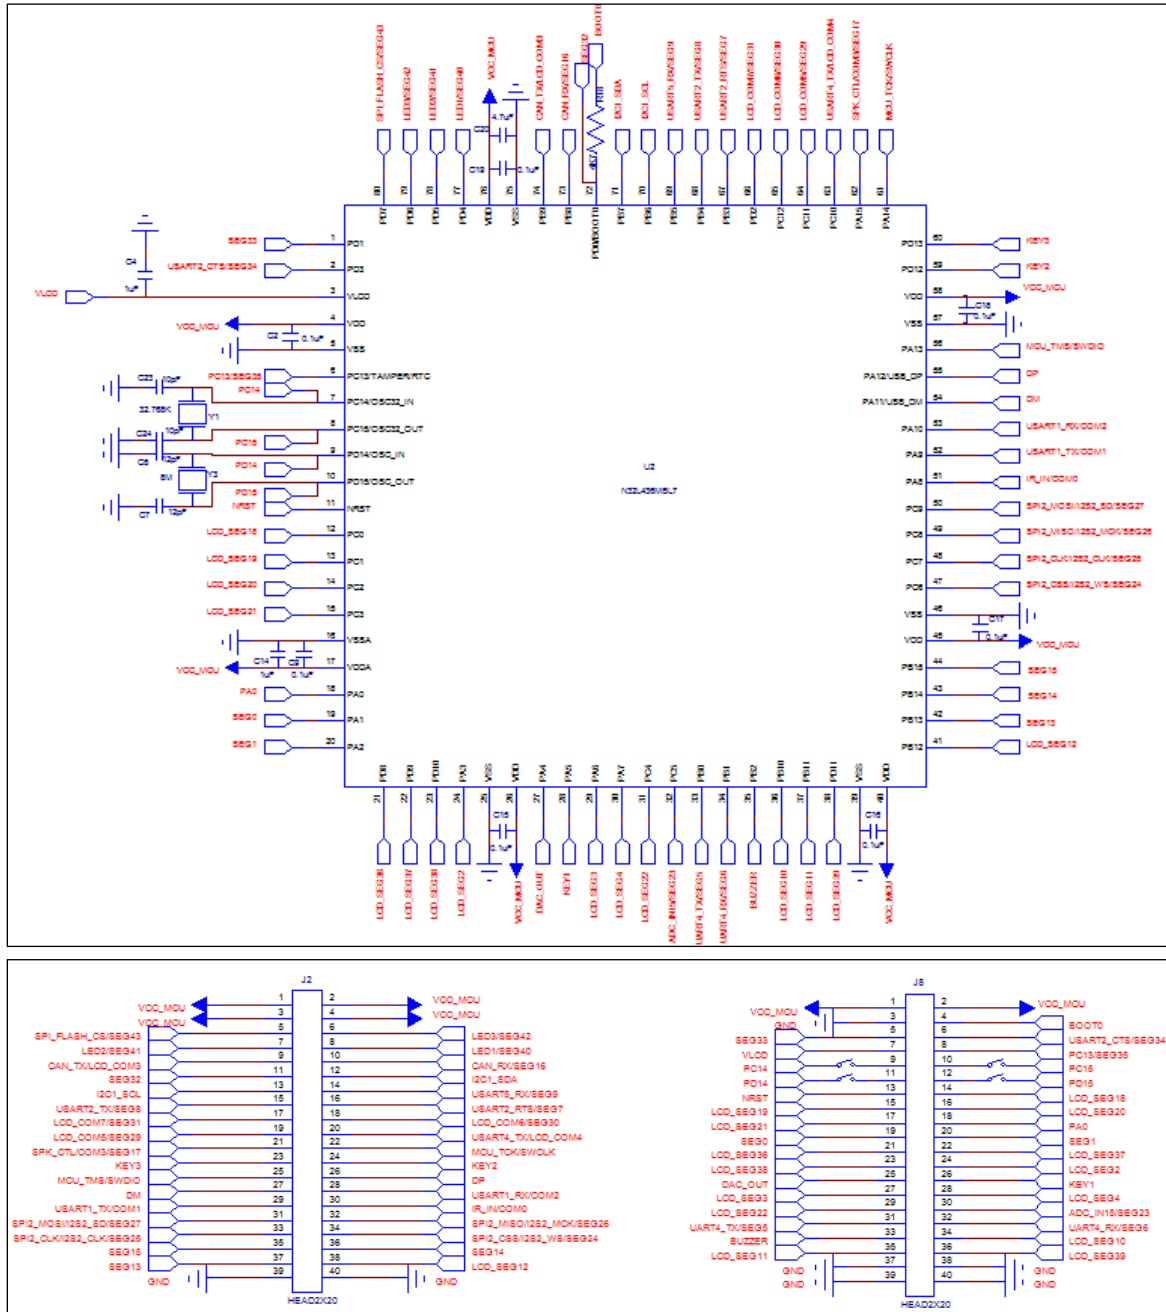

- Power design

Refer to Figure 1-4 for the schematic diagram of the power supply design. The PCB is powered by 5V through USB, and then outputs 3.3V through the LDO to supply power to the entire PCB board.


Figure 1-4 Power Design

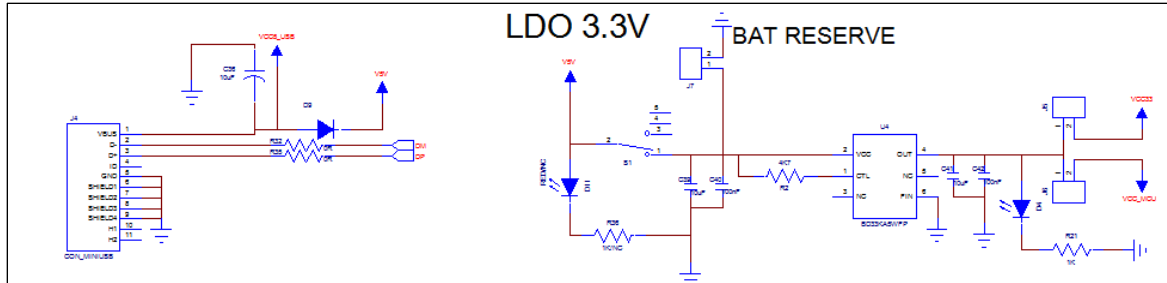

• Button design

Refer to Figure 1-5 for the schematic diagram of the key design. There are a total of 5 keys, which are the three general keys, the MCU wake-up key and reset key.


Figure 1-5 Button Design

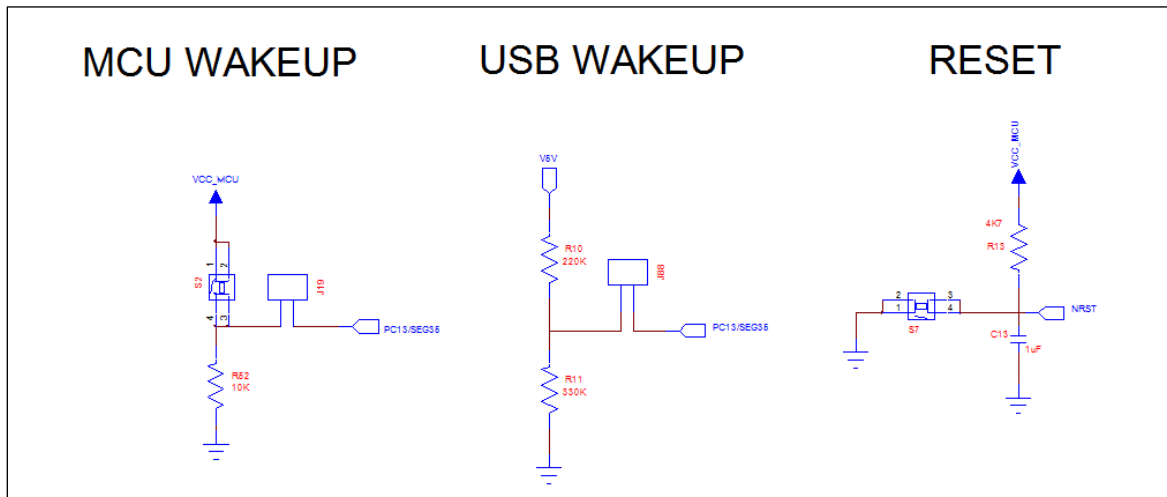

• LED light design

Refer to Figure 1-6 for the schematic diagram of LED light design. There are a total of 5 LED lights. D1, D2, and D3 are connected to PA8, PB4 and PB5 of the main MCU respectively, which can be used for debugging. D6 and D7 are used for NS-LINK MCU control to monitor the running status of NS-LINK.


Figure 1-6 LED Light Design

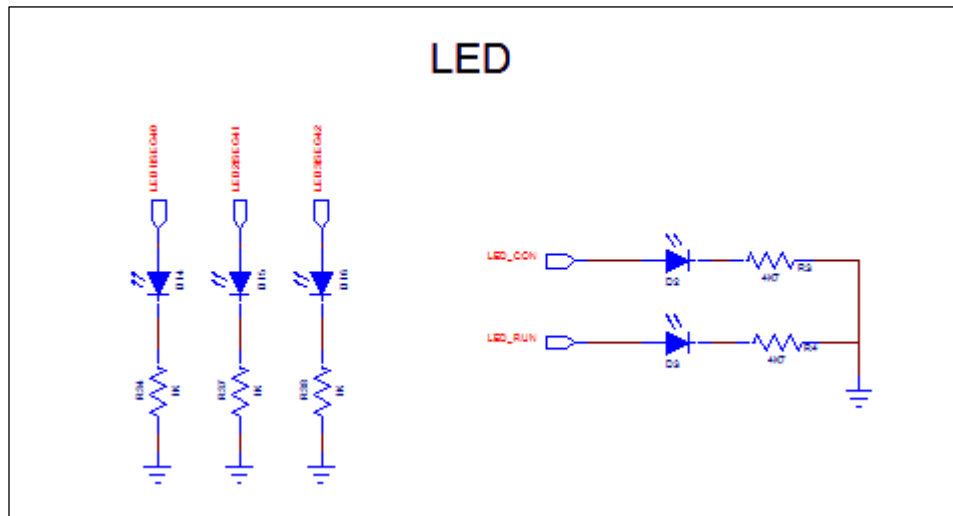

- Crystal


Refer to Figure 1-7 for the crystal connection diagram. The chip has two external crystals, 32.768KHz and 8MHz respectively.

Figure 1-7 Crystal Design

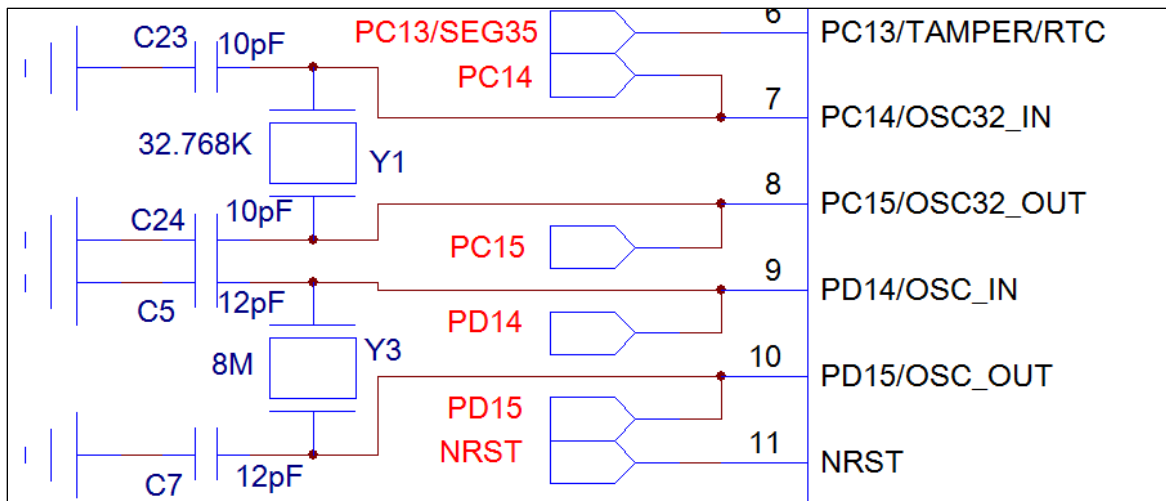


- Infrared module

Figure 1-8 Infrared Module

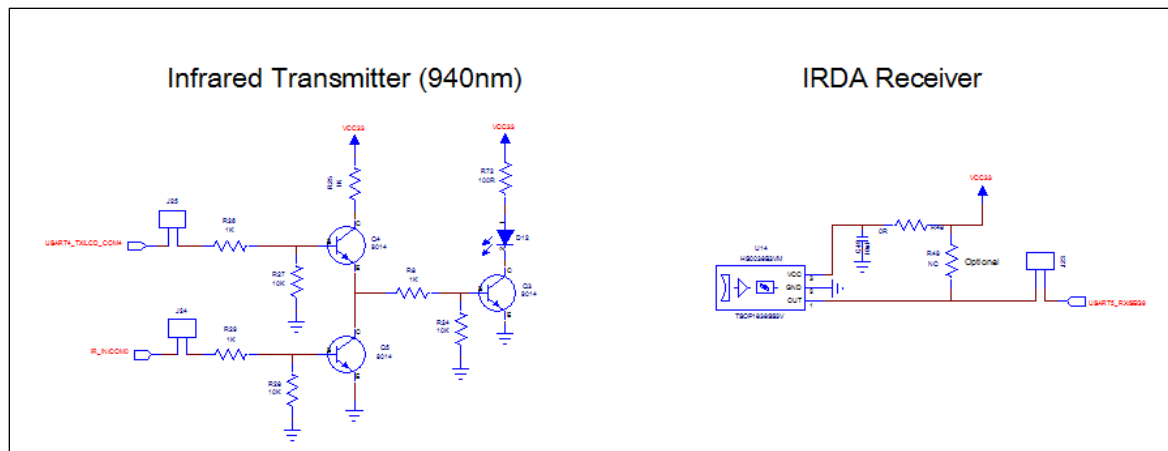


- CAN interface

Figure 1-9 CAN Interface

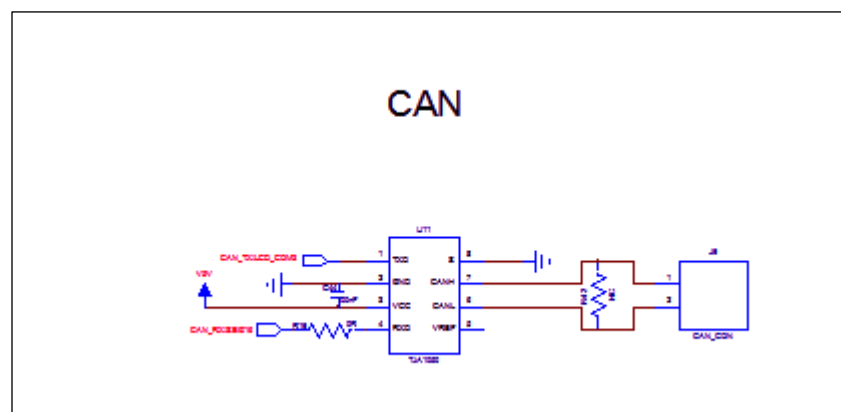


- Buzzer

Figure 1-10 Buzzer

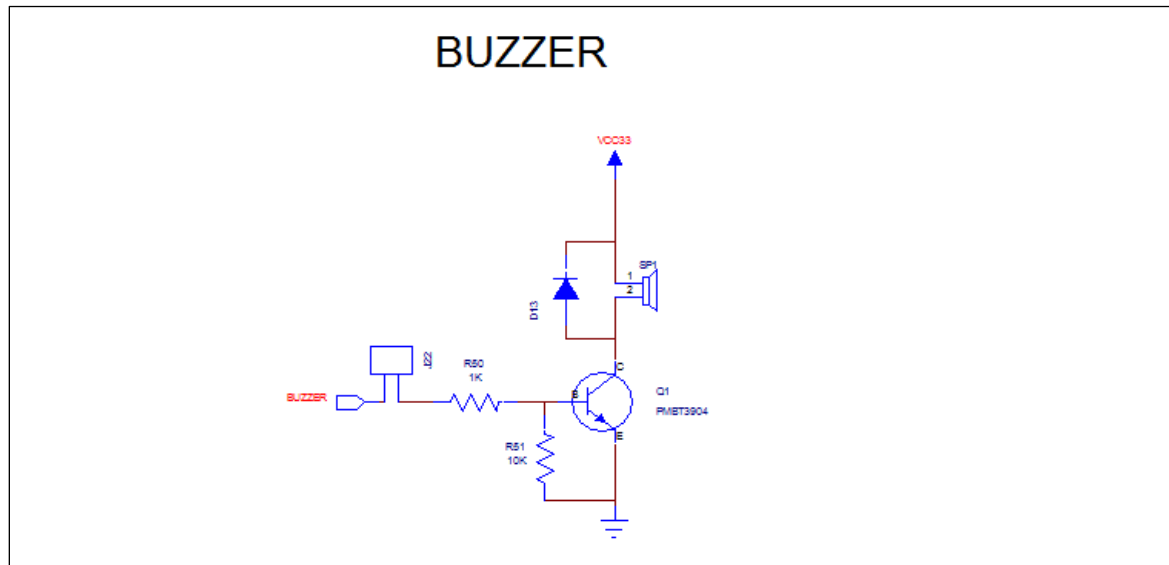


- Potentiometer

Figure 1-11 Potentiometer

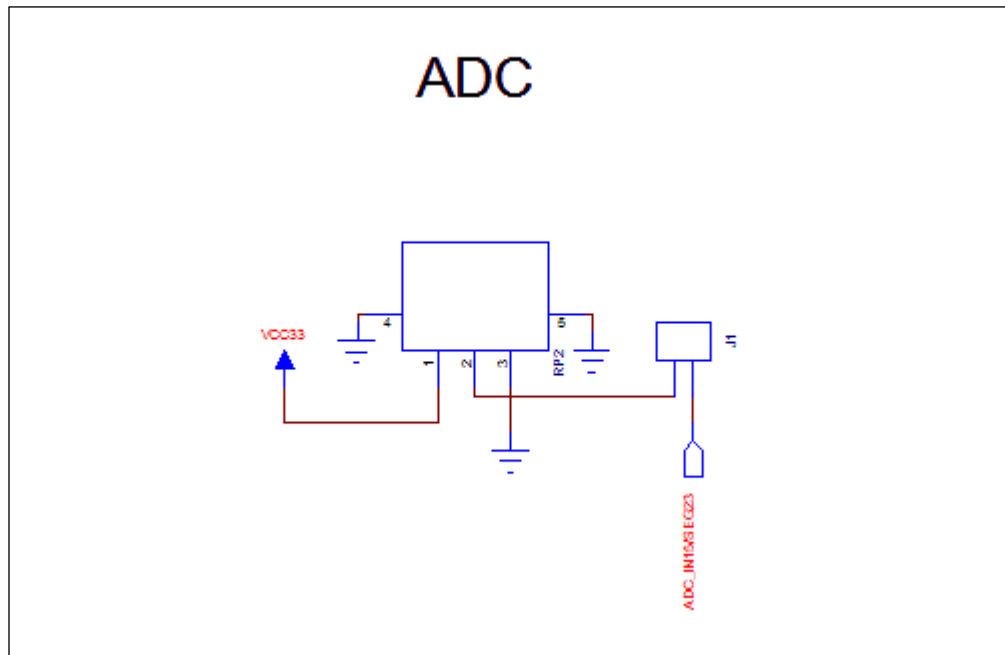

- Memory

Figure 1-12 Memory

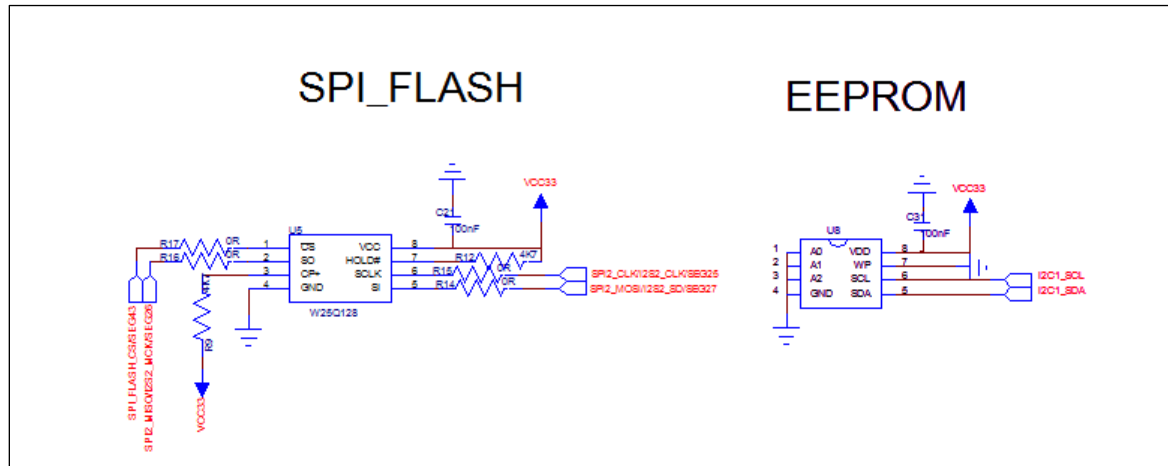


- NS-LINK

Refer to Figure 1-13 for the schematic diagram of NS-LINK. Users can directly connect the USB cable to download the program through the DEBUG USB port, without the need for a ULINK or JLINK debugger.

You can also debug through the DEBUG USB virtual serial port.

Figure 1-13 NS-LINK

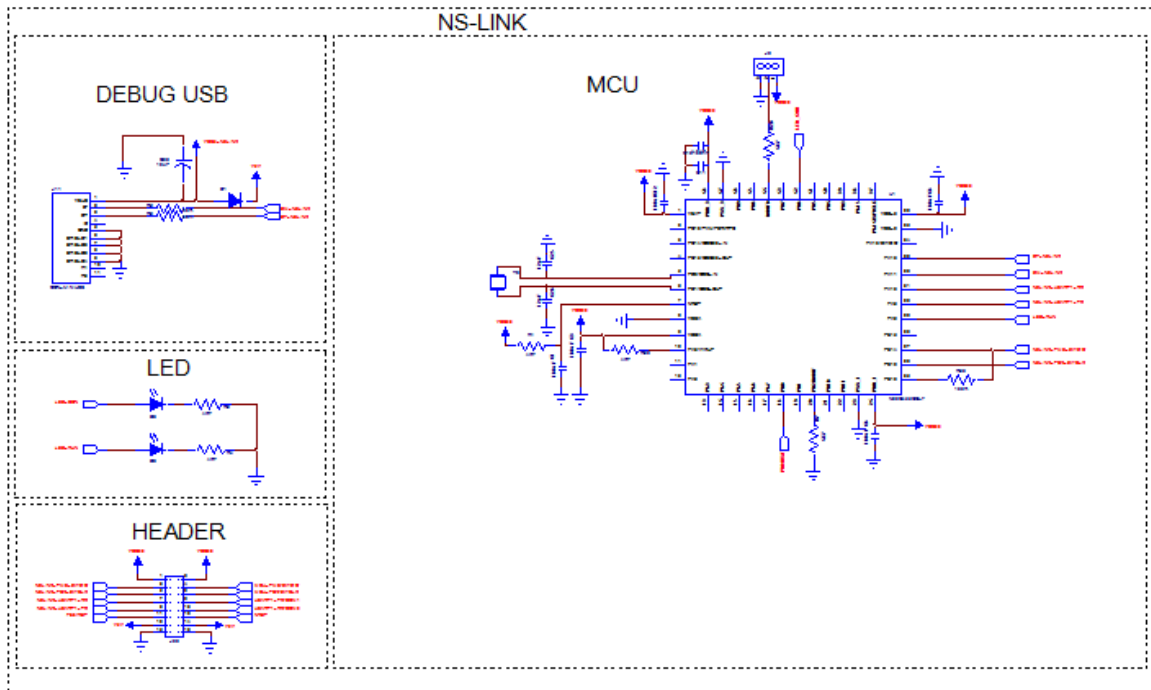

● **Description of peripheral devices:**

- 1) When designing PCB LAYOUT, put two capacitors near VDD (PIN76), 4.7uF and 0.1uF respectively, and put 0.1uF capacitors near the other VDD pins
- 2) PC14-OSC32_IN, PC15-OSC32_OUT: When there is a need for an external high-precision RTC clock, a 32.768KHz crystal needs to be connected close to the two pins, and it can be omitted if there is no need.
- 3) DP, DM: 33Ω series resistance, placed close to the pins

2 Version History

Version	Date	Changes
V1.1	2022.06. 25	Initial version

3 Disclaimer

This document is the exclusive property of NSING TECHNOLOGIES PTE. LTD.(Hereinafter referred to as NSING).

This document, and the product of NSING described herein (Hereinafter referred to as the Product) are owned by NSING under the laws and treaties of Republic of Singapore and other applicable jurisdictions worldwide. The intellectual properties of the product belong to Nations Technologies Inc. and Nations Technologies Inc. does not grant any third party any license under its patents, copyrights, trademarks, or other intellectual property rights. Names and brands of third party may be mentioned or referred thereto (if any) for identification purposes only. NSING reserves the right to make changes, corrections, enhancements, modifications, and improvements to this document at any time without notice. Please contact NSING and obtain the latest version of this document before placing orders.

Although NATIONS has attempted to provide accurate and reliable information, NATIONS assumes no responsibility for the accuracy and reliability of this document. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. In no event shall NATIONS be liable for any direct, indirect, incidental, special, exemplary, or consequential damages arising in any way out of the use of this document or the Product.

NATIONS Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, Insecure Usage'. Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, all types of safety devices, and other applications intended to supporter sustain life. All Insecure Usage shall be made at user's risk. User shall indemnify NATIONS and hold NATIONS harmless from and against all claims, costs, damages, and other liabilities, arising from or related to any customer's Insecure Usage Any express or implied warranty with regard to this document or the Product, including, but not limited to. The warranties of merchantability, fitness for a particular purpose and non-infringement are disclaimed to the fullest extent permitted by law. Unless otherwise explicitly permitted by NATIONS, anyone may not use, duplicate, modify, transcribe or otherwise distribute this document for any purposes, in whole or in part.