

User Guide

N32G056RBQ7_STB Development Board Hardware User Guide

Introduction

The purpose of this document is to allow users to quickly familiarize themselves with the N32G056RBQ7_STB development board, understand the functions, instructions and precautions of the development board, so as to conduct MCU debugging and development based on the development board.

1	Hardware Development Instructions	3
1.1	Briefly	3
1.2	Development board function	3
1.3	Development board layout	4
1.4	Development Board Jumper Instructions	6
1.5	Development board schematic	7
2	Version history	12
3	Notice	13

1 Hardware Development Instructions

1.1 Briefly

The N32G056RBQ7_STB development board is used for sample development of the 32-bit N32G056RBQ7 chip of Nsing Technologies Pte., Ltd. This document describes in detail the functions, usage instructions and precautions of the N32G056RBQ7_STB development board.

1.2 Development board function

The main MCU chip model of the development board is N32G056RBQ7, LQFP64 pin package. The development board connects all functional interfaces to facilitate customer development.

1.3 Development board layout

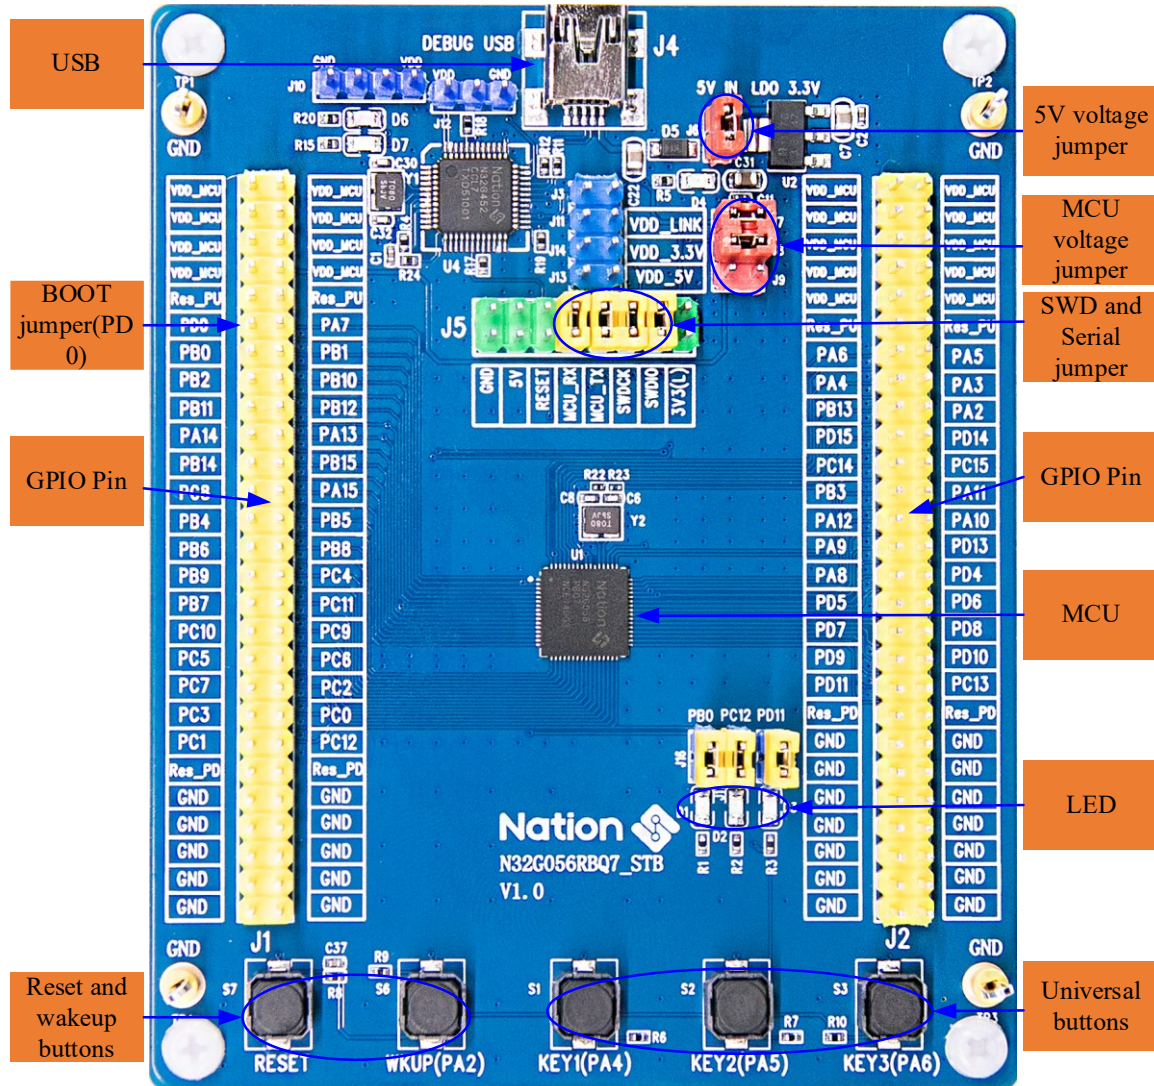


Figure 1-1 Development board layout

1) Power supply for the development board

The development board can be powered by DEBUG USB (J4) and connected to the 3.3V LDO input port through the J6 jumper .

2) USB interface (J4)

Through the DEBUG USB interface of the NS-LINK chip (U4), the main MCU program download and

debugging function can be provided, and the serial port of the MCU can also be connected to provide the USB to serial port function..

3) SWD interface and Serial port (J5)

SWD interface: SWDIO and SWDCK, used for downloading and debugging the main MCU program. ULINK2 or JLINK can be used to download and debug the MCU. You can also use a jumper cap to short-circuit the SWDIO signal pin and SWDCK signal pin to download the MCU through DEBUG USB. debug .

Serial port: MCU_TX and MCU_RX are used as serial port external signals. MCU's PA9 (TX) and PA15 (RX) are used as serial ports. They can be connected to external serial port devices separately, or the jumper cap can be shorted to the MCU_TX signal pin and MCU_RX signal pin. Convert the USB port to a serial port through NS-LINK on the development board to facilitate customer use .

4) Reset and Wake Buttons (S7, S6)

S7 and S6 are the reset button and wake-up button respectively, which are connected to the NRST pin and PA2 pin of the chip respectively for chip reset and wake-up functions.

5) Universal keys (S1, S2, S3)

S1, S2, and S3 are general buttons, which are connected to the pins PB0, PC12 and PD11 of the chip respectively.

6) BOOT (J1 PIN11)

J1 PIN11 PD0 pin is the BOOT0 pin, which can be shorted to power and ground through a jumper as needed.

7) GPIO口 (J1, J2)

All chip GPIO interfaces are lead out, and 3.3V voltage and GND pins are also reserved on the pins to facilitate testing. For the specific definition of the interface, please refer to the "UM_N32G056RBQ7 User Manual".

1.4 Development Board Jumper Instructions

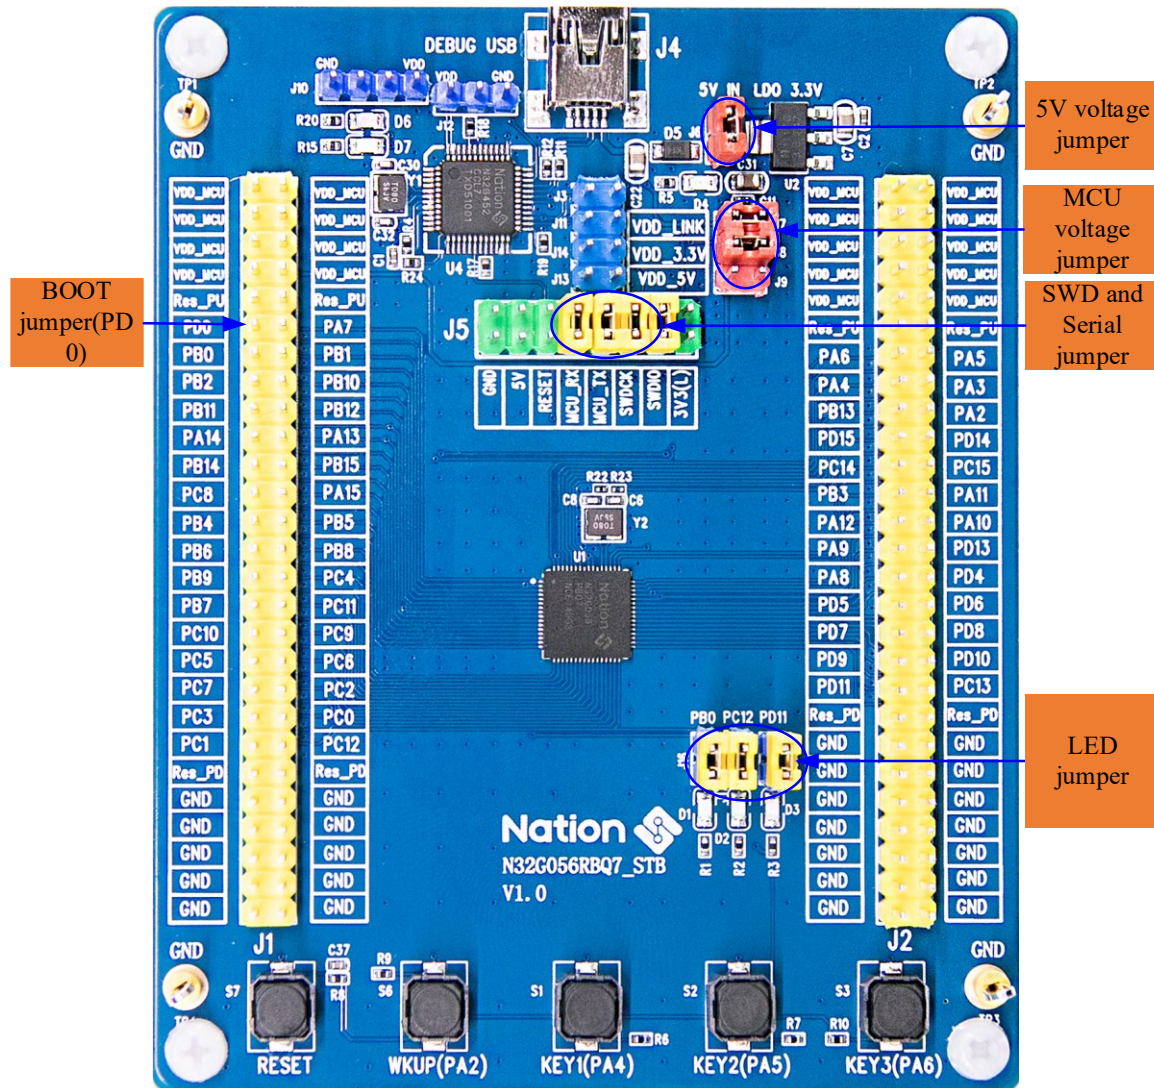


Table 1-1 Development Board Jumper Description List

No.	Jumper bit number	Jumper function	Instructions for use
1	J6	5V input voltage jumper	J11 jumper is used to connect the J4 USB interface to supply power to the LDO3.3V input port.
2	J7、 J8	3.3V Power supply jumper	J7: Power Supply 3.3V to NS-LINK MCU chip. J8: Power supply 3.3V to the main MCU chip.
3	J5	SWD jumper	Use NS-LINK to download the program to the MCU through the USB DEBUG port. You need to short-circuit the SWDIO signal pin and the SWDCK signal pin..
	J5	Serial jumper	When using NS-LINK as a serial port through the USB DEBUG port, you need to short-circuit the MCU_TX signal pin and the MCU_RX signal pin..
4	J1 PIN11	BOOT jumper	J1 PIN11: BOOT0.
5	J16、 J17、 J18	LED light jumper	J16、 J17、 J18: This jumper can disconnect and connect the GPIO and LED on and off. J16: D1(PB0) J17: D2(PC12) J18: D3(PD11)

1.5 Development board schematic

The schematic diagram of the N32G056RBQ7_STB development board is explained as follows (see "N32G056RBQ7_STB_V1.0" for details).

1) MCU connection

Refer to Figure 1-3 for the MCU connection schematic diagram. The MCU VDD pin is connected to a decoupling capacitor. All GPIOs are connected to the J1, J2 and J3 pins for easy debugging..

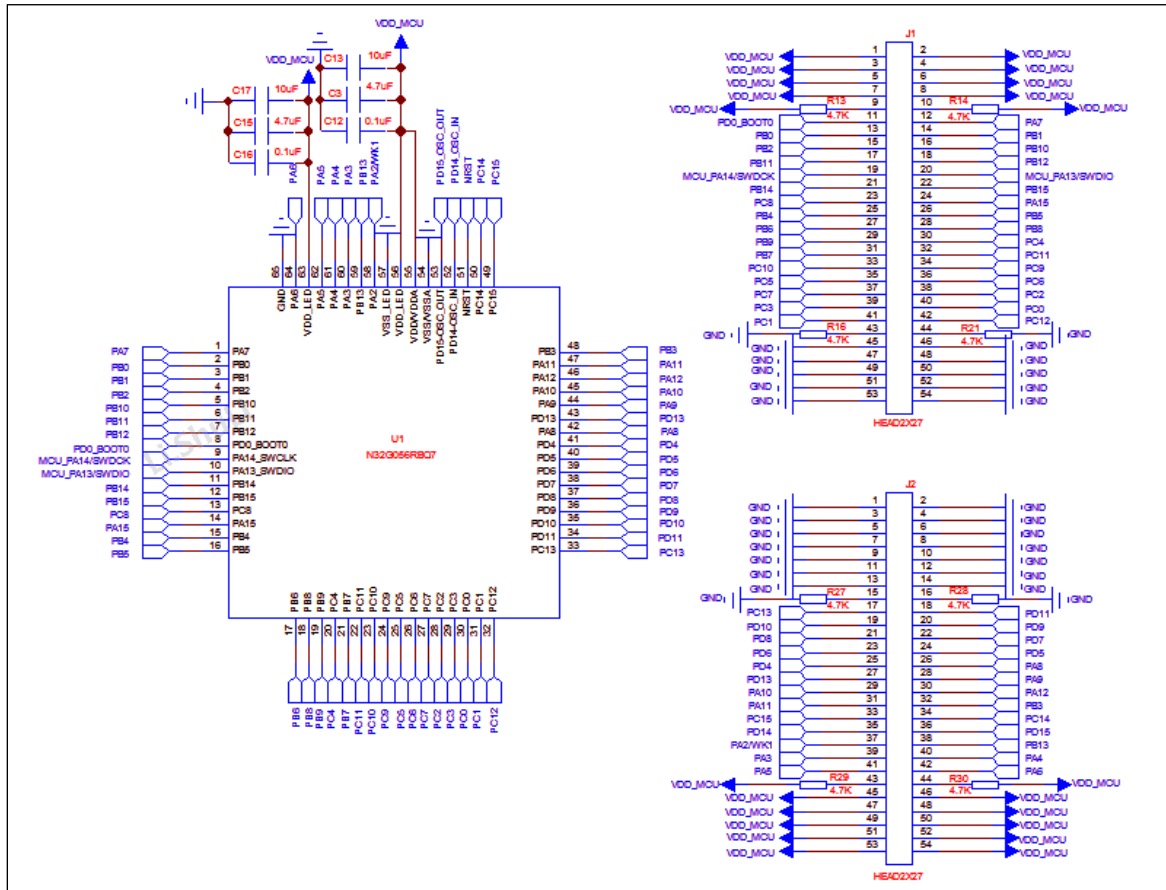


Figure 1-3 MCU connection diagram

2) Power Design

Refer to Figure 1-4 for the power supply design schematic. The PCB supplies 5V power through USB, and then outputs 3.3V voltage through LDO. It can power 3.3V/5V to the MCU through jumper J8/J9.

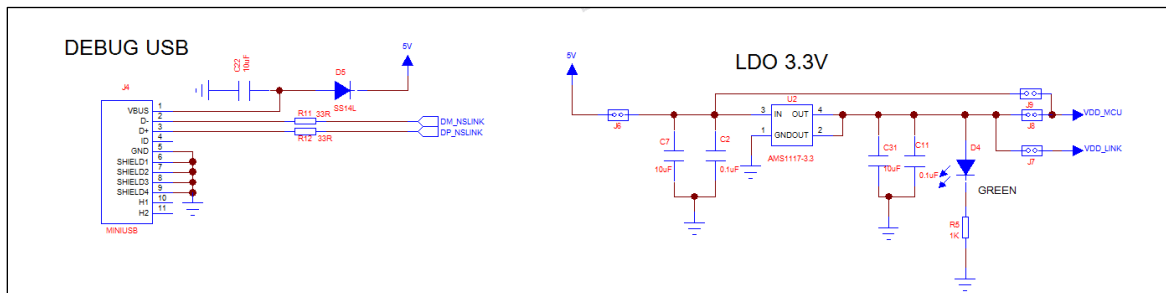


Figure 1-4 Power Design

3) Button design

Refer to Figure 1-5 for the schematic diagram of button design. There are 5 buttons in total, including 3

general buttons, MCU wake-up button and reset button.

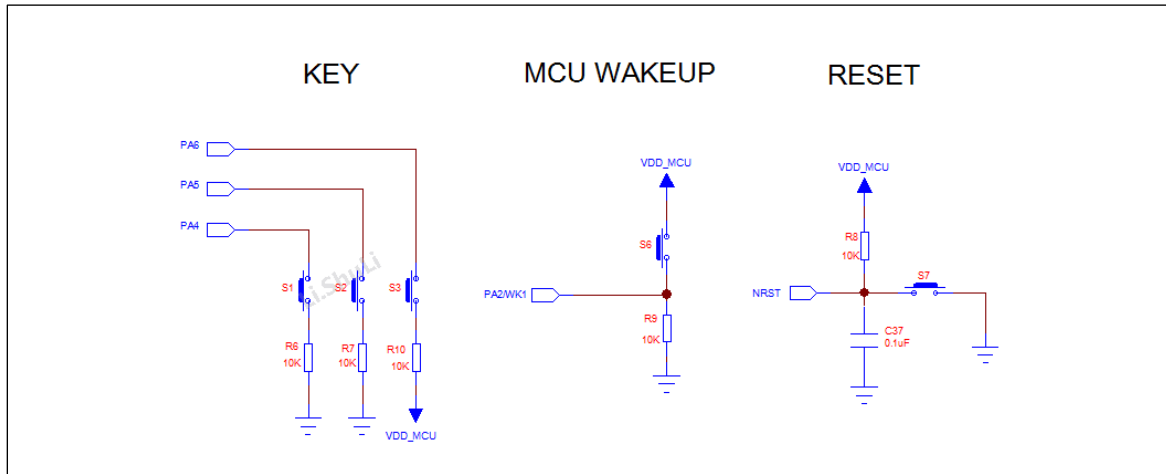


Figure 1-5 Button Design

4) LED light design

Refer to Figure 1-6 for the LED lamp design schematic. There are 5 LED lamps in total. D1, D2, and D3 are connected to PB0, PC12, and PD11 of the main MCU respectively, which can be used for debugging. D6 and D7 are used for NS-LINK MCU control and monitoring of NS-LINK operating status.

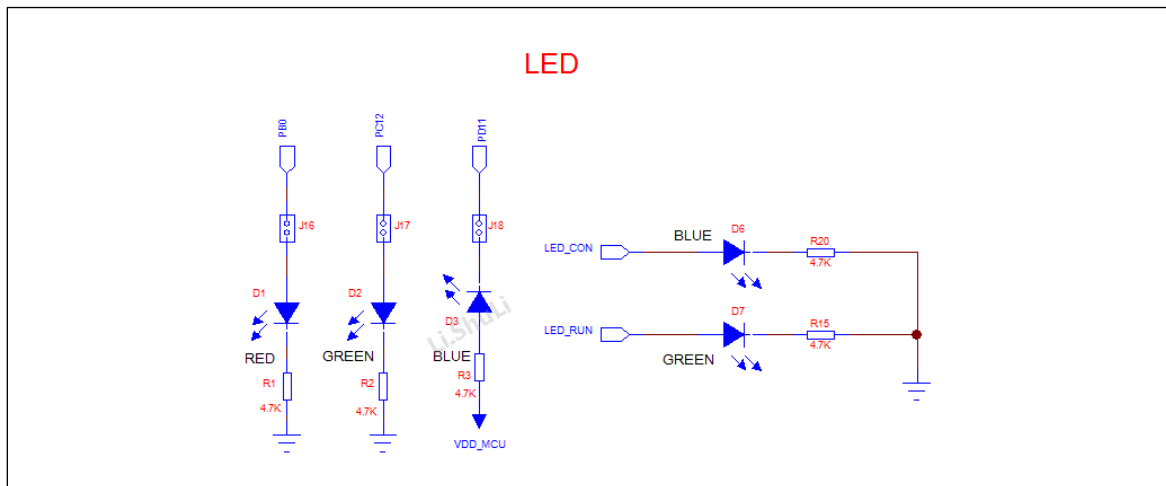


Figure 1-6 LED Light Design

5) Crystal

Refer to Figure 1-7 for the crystal connection diagram. The chip has an external crystal, which is 8MHz.

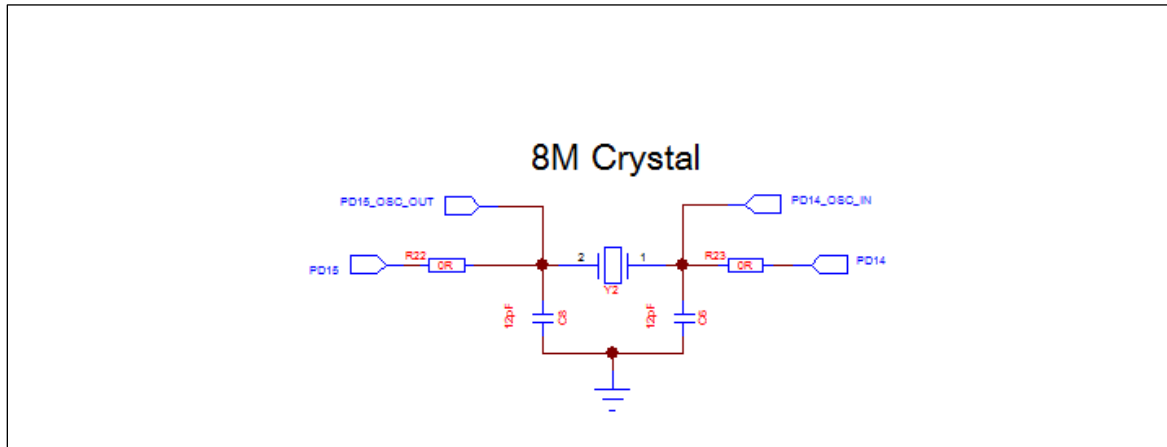


Figure 1-7 crystal design

6) NS-LINK

Refer to Figure 1-8 for the NS-LINK schematic diagram. Users can directly connect the USB cable through the DEBUG USB port to download the program, eliminating the need for a ULINK or JLINK programmer. You can also debug through the DEBUG USB analog serial port.

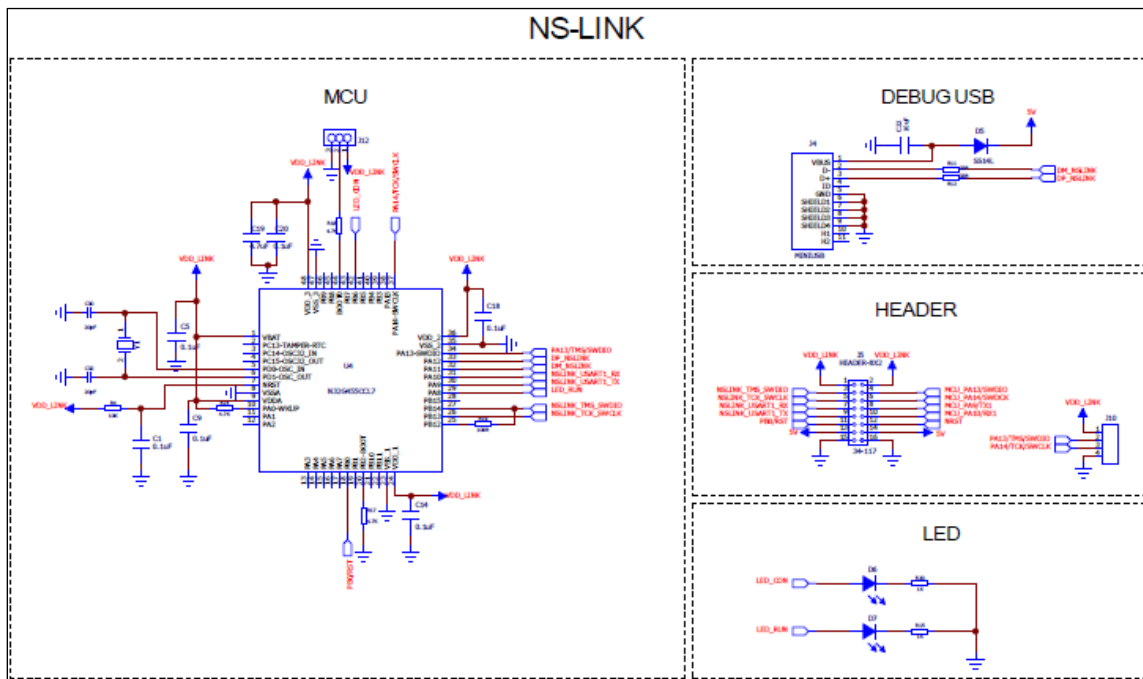


Figure 1-8 NS-LINK

- **Description of peripheral devices:**

- 1) When designing PCB LAYOUT, there are two capacitors near VDD (PIN55), which are 4.7uF and 0.1uF respectively.

2 Version history

Version	Date	Changes
V1.0	2024-4-2	Initial version

3 Disclaimer

This document is the exclusive property of NSING TECHNOLOGIES PTE. LTD. (Hereinafter referred to as NSING). This document, and the product of NSING described herein (Hereinafter referred to as the Product) are owned by NSING under the laws and treaties of Republic of Singapore and other applicable jurisdictions worldwide. The intellectual properties of the product belong to Nations Technologies Inc. and Nations Technologies Inc. does not grant any third party any license under its patents, copyrights, trademarks, or other intellectual property rights. Names and brands of third party may be mentioned or referred thereto (if any) for identification purposes only.

NSING reserves the right to make changes, corrections, enhancements, modifications, and improvements to this document at any time without notice. Please contact NSING and obtain the latest version of this document before placing orders. Although NATIONS has attempted to provide accurate and reliable information, NATIONS assumes no responsibility for the accuracy and reliability of this document. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. In no event shall NATIONS be liable for any direct, indirect, incidental, special, exemplary, or consequential damages arising in any way out of the use of this document or the Product.

NATIONS Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, 'Insecure Usage'. Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, all types of safety devices, and other applications intended to supporter sustain life. All Insecure Usage shall be made at user's risk. User shall indemnify NATIONS and hold NATIONS harmless from and against all claims, costs, damages, and other liabilities, arising from or related to any customer's Insecure Usage. Any express or implied warranty with regard to this document or the Product, including, but not limited to. The warranties of merchantability, fitness for a particular purpose and non-infringement are disclaimed to the fullest extent permitted by law. Unless otherwise explicitly permitted by NATIONS, anyone may not use, duplicate, modify, transcribe or otherwise distribute this document for any purposes, in whole or in part.